


# Sportsound Announcer's Interface Quick Start Guide

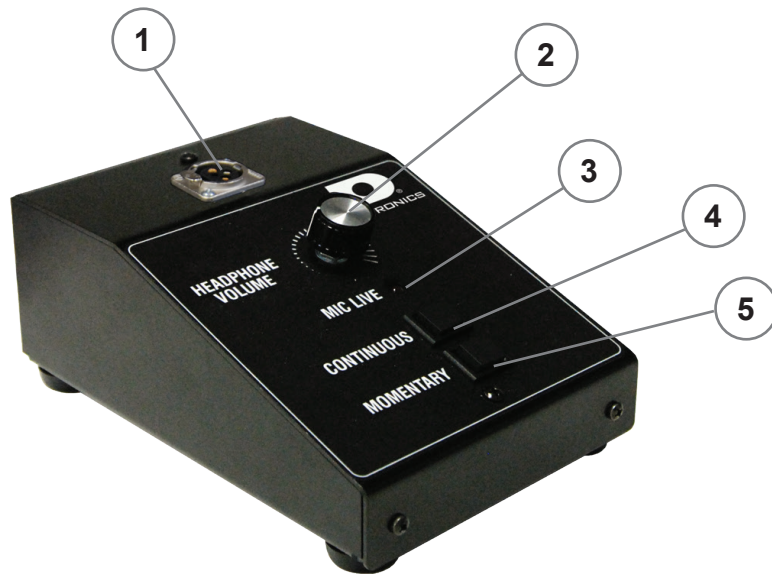

1. XLR input jack - connect gooseneck or headset microphone
2. **HEADPHONE VOLUME** - Turn this knob clockwise to increase and counter-clockwise to decrease headphone volume.
3. **MIC LIVE** - This LED indicator lights up when the microphone is live.
4. **CONTINUOUS** - Press this button once to activate the microphone and turn on the **MIC LIVE** indicator. Press this button again to deactivate the microphone and turn off the **MIC LIVE** indicator.
5. **MOMENTARY** - Hold down this button to activate the microphone. Release this button to deactivate the microphone. The **MIC LIVE** indicator will remain on as long as the button is pressed.



6. **HEADPHONES** - 1/4" jack for headphones
7. **MIC 1** - XLR output jack to audio mixer
8. **AUX 1** - XLR input jack from audio mixer
9. **POWER INPUT** - plug in provided 24 VDC wallpack transformer
10. **MIC ONLY/MIXED AUDIO** - Located on the bottom of the console, this switch determines whether the announcer can hear only their microphone or all audio sources through the headphones.

Leave this set to **MIC ONLY** unless there is a source plugged into the **AUX 1** jack.

